


Thank you for purchasing a Screen Technics Projection Screen, please ensure that you read the following instructions fully before attempting to install this product.

WALL MOUNTING INSTRUCTIONS


STEP 1. Measure the wall where the screen is to be installed and mark with a pencil the desired height to top of screen case and also the centre of the screen.



STEP 2. Measure the length of screen canister along the top surface and mark the centre of the canister with a pencil, to assist in lining up the screen when mounting.

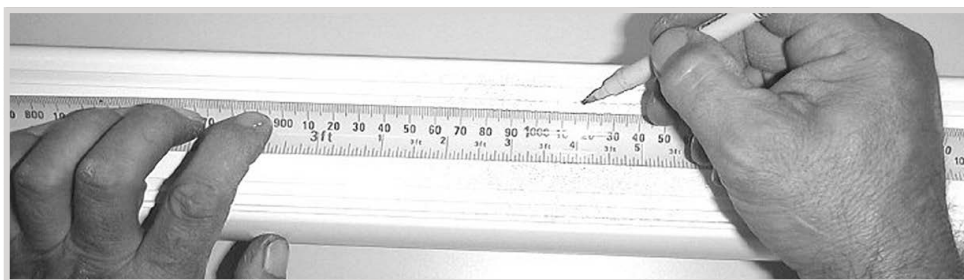

STEP 3. Determine the best positions for the wall brackets, allowing that in Gyprock or in low strength walls the brackets will be screwed into a timber stud. In more solid walls, such as masonry, position the brackets approx 150mm in from the canister end. The brackets should be no more than 450mm in from each end. You must use a minimum of 3 off wood screws per bracket or 2 off Dyna-bolts, for masonry walls and you must be satisfied that the attachment is strong enough for the a safe installation.

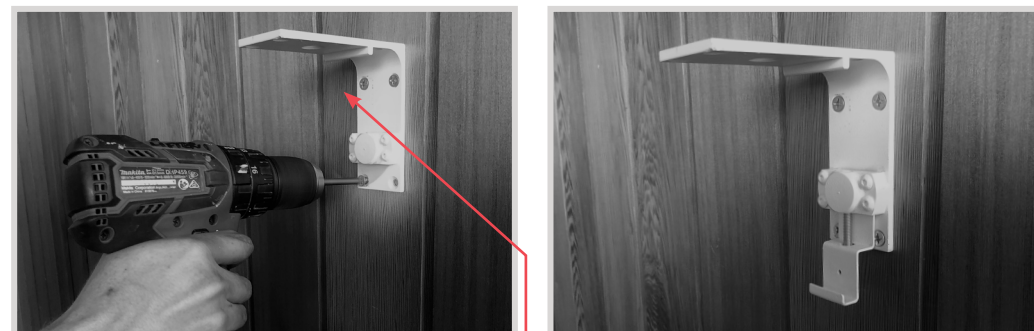

NB: Top of bracket equals top of screen canister.

STEP 4. You may need to remove the bottom clip in order to screw brackets to wall, please ensure to replace them afterwards.

STEP 5. Using two people install the screen by placing the screen canister into the bottom of the bracket clips and pivoting back the canister to slot the top pins into the T channels running along the top of the canister (you may have to remove any tape that is in the way).

Continued Over.../

STEP 6. Holding screen in position tighten up Allen screw at each end and check that the top pins have hooked into the T section of the screen canister.



STEP 7. Ensure projection screen case is latched into bracket as shown.



CEILING MOUNT INSTRUCTIONS

Below is a photo showing a side view using the brackets for ceiling fixing, you would follow the instructions for the wall mounting system, with the only difference being the screen is mounted hard against the ceiling. It is important that adequate support is supplied by the ceiling structure to support the screen and to ensure a safe installation. Never rely just on the Gyprock for attachment.



Please follow these instructions to ensure trouble free operation;

1. Ensure that the slat rod has not been pushed into the slat during transport. If so, pull the slat rod down to free it up
2. When installed, the opening in the sheath should be down and at the back of the sheath.
3. Cleaning of the screen is best achieved by first dusting the surface with a feather duster, then to remove any stubborn marks, use a small amount of mild detergent and warm water on a clean white lint free cloth. Do not use a saturated cloth, as this may leave a watermark, only a damp one. It is most important that you only treat the actual mark by this process and not the entire surface.
4. Once the screen has been installed, to operate pull down on screen by supplied central chrome handle mounted on the bottom slat rod and lock into the down position.
5. To release the spring locking mechanism, work on the principle of slow down, fast up. Gently pull the screen down 10 centimetres or more, then let the spring pull the screen up whilst keeping a guiding hand on the slat rod to control the screen. The screen has a strong spring mechanism that will pull the screen quite quickly, do not slow the ascent of the screen until it reaches the case as this will cause the latching mechanism to lock into place again.