

Thank you for purchasing a Screen Technics Projection Screen, please ensure that you read the following instructions fully before attempting to install this product.

**STEP 1.** Layout all components ready for assembly as shown.



**STEP 2.** Push the four corners of the frame together. You may need to use a plastic or wooden mallet (not metallic) to achieve this result.



**Please Note - For screens over 100" Diagonal (Front Projection Only) please refer to section 2 of this document before proceeding.**

**STEP 3.** With the Hex Head Allen-Key screw use the provided Allen-Key to screw tight all four corners. You must ensure each of the four corners are square and there are no large gaps obvious before you start to insert Hex head Allen-Key screw, otherwise jamming may occur.




**STEP 4.** Tighten all internal Allen-Key screws (one on each corner as shown below), before fully tightening the external screws.




**STEP 5.** There are 2 options available to install the L-Shaped brackets:

- The brackets come supplied with self tapping (Tek) screws that allow you to drill directly into the frame, anywhere that best suits wall stud supports and the like. Later on in the installation you will need enough room to re-screw these Tek screws top and bottom of the frame for final fixing.
- If you don't have enough "elbow" room to get to the top of frame with a power or screw driver at this later time because of a low ceiling then utilize the nylon bushes supplied with the small Allen-Key bolt and fix one each to the two top L-Brackets and use the two locating holes on the top of the frame, although this restricts bracket positioning it allows you to simply insert the bushes into the holes and then fix the bottom brackets by screws and your done.


**STEP 6.** Attach brackets as shown - Utilizing nylon bushes and locating holes only if necessary as explained in previous step.

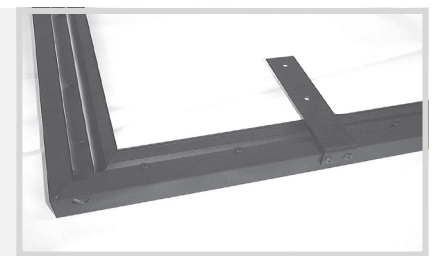

**STEP 7.** With all four brackets attached, place screen frame (not with surface) on the wall and mark holes.

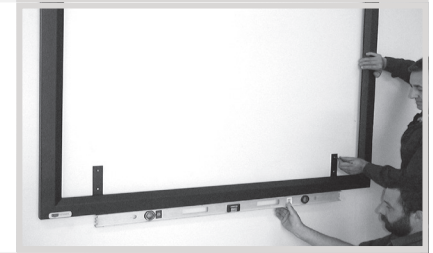


**STEP 8.** Use wall mates or plugs to attach frame if no wall studs are present and ensure that you have a secure fixing method for a safe installation.

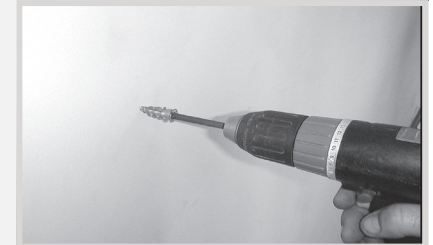

Continued Over.../

**STEP 9.** Remove frame from the wall by undoing outside bracket screws - Brackets are to remain on wall.

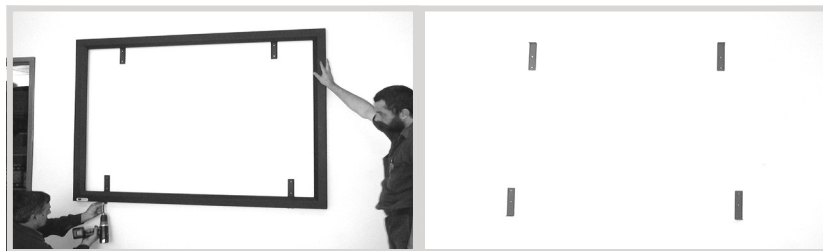

## PREPARE SCREEN SURFACE

**Please do not allow the steel rods to come into contact with the screen surface viewing area as it may cause damage.**

**STEP 10.** Place all four steel rods into the sleeve surrounding the screen surface.




**STEP 11.** Once all four rods have been placed into the screen sleeve, attach the screen surface to the frame as shown below - ensuring to work the screen surface evenly to all four sides.



**STEP 12.** Once all four sides of the screen surface have been placed evenly, the screen surface should be attached to the frame as shown below. Now you are ready to install.

**Please Note - For screens over 100" Diagonal (Front Projection Only) please refer to section 2 of this document before proceeding.**

**STEP 13.** Attach the screen to the brackets on wall - Wipe down screen frame of any finger prints and dust off the screen surface.

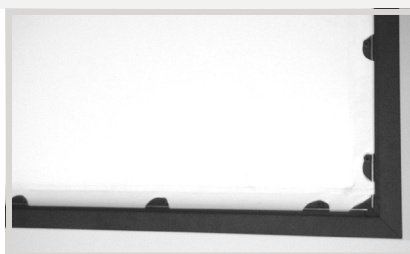


## SECTION 2

For CinemaSnap 110" Diagonal (Front Projection Only) and larger please see below.


### ATTACHING THE SPREADER BAR

**STEP 1.** Before completing step 2 please make sure that the metal threaded blocks (shown in picture 1) are inserted in to the bottom and top of frame (shown in picture 2) and moved to the centre of the frame (shown in picture 3)

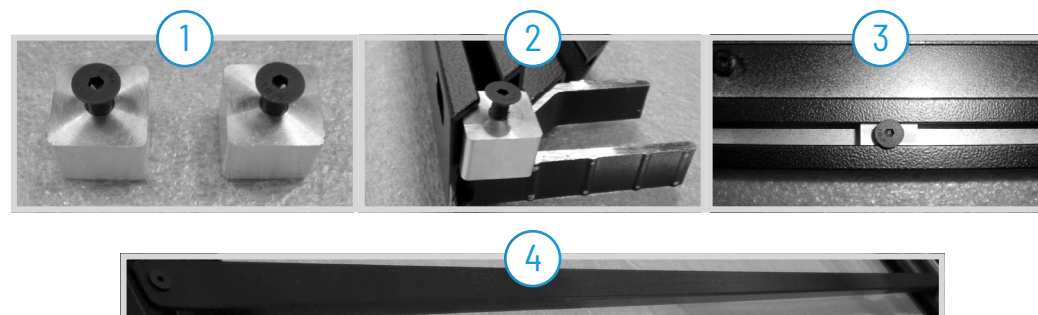

**STEP 2.** After the frame has been constructed and screen surface has been attached to the frame as per the above instructions the spreader bar (shown in picture 4) will need to be attached to the back of the frame.

Position the metal threaded blocks in the centre of the frame, remove the screws from the metal threaded blocks and place the spreader bar across the frame lining it up with the holes in the threaded blocks (shown in picture 5)

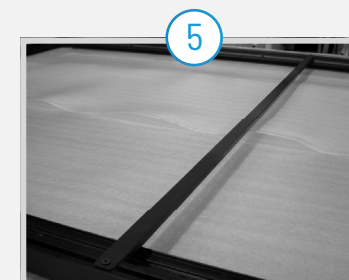

**STEP 3.** Attach the spreader bar to the metal threaded blocks and make sure they are tight

**STEP 4.** Attach the screen to the brackets on wall - Wipe down screen frame of any finger prints and dust off the screen surface.

Please follow these instructions to ensure trouble free operation;

- Cleaning of the screen is best achieved by first dusting the surface with a feather duster, then to remove any stubborn marks, use a small amount of mild detergent and warm water on a clean white lint free cloth. It is most important that you only treat the actual mark by this process and not the entire surface. Do not use any abrasive cleanser as this will damage the surface.

Should you have any questions regarding the installation of our projection screens please call our technical sales desk on +61 2 4869 2100 for assistance